



XK300 Essence User Manual

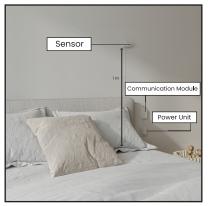


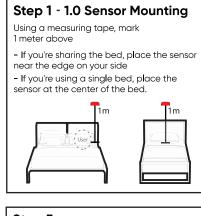


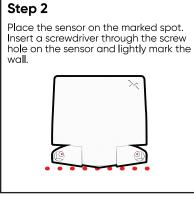

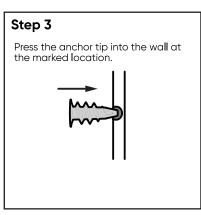





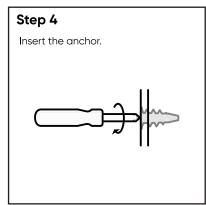


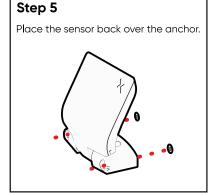




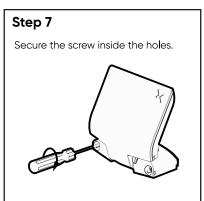

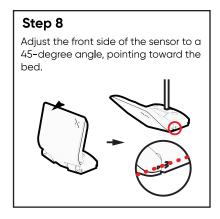


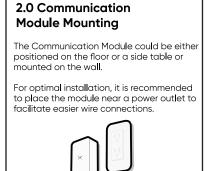

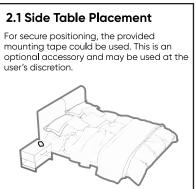


XK300 Essence User Manual

2.2 Floor Placement

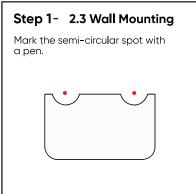





Step 2 Press the anchor tip into the wall at the marked location. Secure the anchor into the wall. Note: For thicker or harder wall materials, pre-drill the hole.

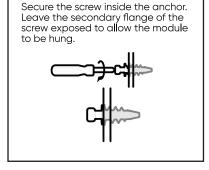

Step 3



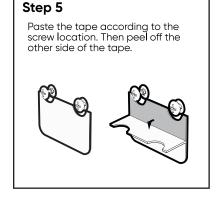

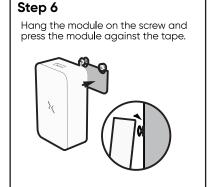

3.0 Operation Check Connect the power to the communi-

cation module. The green LED will turn on for approximately 3 seconds, indicating that the device is receiving

- If the green LED does not turn on, please check the power connection.
- If the green LED turns off after 3 seconds, this indicates normal operation.

LED Status

- If the LED turns red or yellow after 3 seconds, this indicates that a fault or error has occurred. In this case, follow the steps below:
- > Disconnect and reconnect the power, and check the LED status again.
- > If the issue persists, please contact your place of purchase for further assistance

4.0 Reset Button

Use the supplied reset pin to press the reset button through the RESET hole.

- Reboot: Short press to reboot the device.
- Factory reset: Press and hold (≈5 s) to perform a factory reset.

